



blitzlock
SMART LOCK SYSTEMS

CAT EYES

USER MANUAL



CAT EYES

BLZ-CE700

www.blitzlock.com

Dear Customer;

Thank you for choosing the Blitzlock brand. Our product is manufactured using advanced technology and high-quality standards to ensure maximum performance and reliability.

Before using your product, we strongly recommend that you carefully review this user manual and any accompanying documents. Please keep these documents in a safe place for future reference.

It is very important to fully follow all instructions and warnings provided in this manual to ensure safe and correct usage of the product.

As the Blitzlock family, we hope our product meets your expectations and wish you good use.

Symbols and Their Meanings:

The following symbols are used in the user manual:

	Important information or useful tips for use
	Warning against dangerous situations in terms of life and property
	Warning against electric shock
	Recyclable material

- Do not dispose of packaging waste together with household or other waste.
- Dispose of it at the packaging collection points specified by the local authority.


CONTENTS

Package Contents.....	4	Verification Mode	14
Language Settings.....	4	Always On Mode.....	14
Important Information.....	5	Lift Prevention Setting	14
General Overview.....	6	Human Sensor	14
Pre-Installation Instructions.....	7	Record Inquiry	15
Assembly Instructions.....	8	Reset	15
Assembly	9	Introduction to Submenus	15
Pre-Installation Instructions.....	10	Commutation Settings (Direction)	15
Introduction to Menus	11	Self-Tuning Body Adjustment	15
Master Password Setup.....	11	Auto Lock Setting.....	15
Finger Print Setup (User).....	11	Auto Lock Time.....	16
IC-Card Setup (User).....	11	Engine Rotation Time.....	16
Creating a Password (User)	12	Torque Setting.....	16
Face -ID (User)	12	Human Sensor (Sensitivity Setting).....	16
Anti Abduction Record	12	Reset to Factory Settings	16
Deleting User	12	Network and Application Settings.....	17
Network Setting	13	Downloading the Application.....	17
Time Setting	13	Application Installation Steps.....	17
Sound Settings	13	Additional Security Disclosures	22


PACKAGE CONTENTS




This packing list has been prepared for reference purposes to ensure that our customers have access to accurate information. Please carefully check the packaging contents for the current and complete contents of the product.

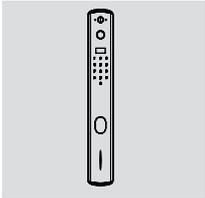


Outdoor Unit

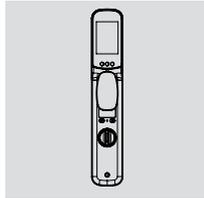


Indoor Unit

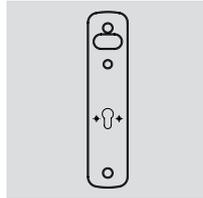

Reference Template

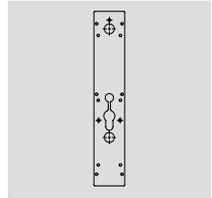


Assembly Plates

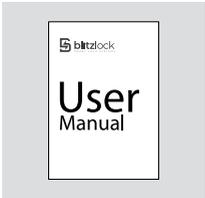

User Manual




Battery

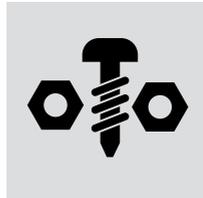

Assembly Kit




Mechanic Keys

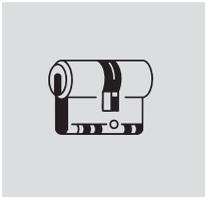

Barrel (Lock Cylinder)



Type-C / USB Cable

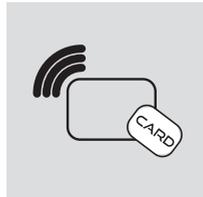

IC Card



Warranty Certificate

Device Language Settings

1 1 # Chinese

2 2 # Indonesian

3 3 # Russian

4 4 # Vietnamese

5 5 # Arabic

6 6 # Spanish

7 7 # Portuguese

8 8 # English

9 9 # Turkish

It is recommended that language settings be configured before using the device for the first time to ensure ease of use.

IMPORTANT INFORMATION

Safety

- Please read and understand all instructions carefully before using Blitz Lock Cat Eyes.
- Damage caused by failure to follow the instructions is not covered by the warranty.
- Use only accessories and parts specified by the manufacturer.
- Use only the original battery supplied with the product or a battery purchased from an authorized service center. Do not forcefully disassemble the product to prevent the alarm from activating or damaging the product.
- Do not scratch the surface of the product with sharp objects, as this may cause permanent damage and prevent the device from functioning.
- Do not expose the product to sunlight, water leaks, or splashes.
- To prevent damage to the product, do not expose it to abrasive substances (chemicals, cleaning agents, etc.).
- Do not hang any objects on the product, as this may affect its performance and normal use.
- Please clean the product with a soft cloth. Do not charge the battery with fast chargers. (5 Volts 2 Amps is recommended)
- Please obtain service from an authorized service center to install the door lock and follow the provided installation instructions. Do not attempt to install or remove the lock yourself.
- Do not share your password information with anyone.

- Please change the default master PIN code immediately after installation and store the mechanical key away from the environment where the product is installed.
- If the low battery alarm sounds, please charge the battery.

Attention


- To prevent explosion, keep the battery away from fire or other ignition sources.
- Do not use any power source that does not meet the safety requirements to operate the product.
- Please contact Blitz Lock authorized service center for any replacement parts and request them from authorized service centers.
- Do not use accessories or parts manufactured by other manufacturers or not specifically recommended by Blitz Lock. The use of such accessories and parts will void your warranty.

Disposal of used products and batteries

- You can request to have your lock returned from Blitz Lock authorized service centers.
- Please comply with local regulations and do not dispose of used products in normal household waste.
- Proper disposal of used products can help prevent potential adverse effects on the environment and human health.
- Batteries should not be disposed of with normal household waste.





GENERAL OVERVIEW

1. Camera
2. Finger Print Sensor
3. LCD Screen
4. Keypad and IC Card Reader
5. Mechanical Key and Emergency Power Input
6. Outdoor Unit
7. Set Screw
8. Barrel (Lock Cylinder)
9. Set Screw
10. Mounting Plate
11. Handle Bar
12. Indoor Unit
13. Mechanical Release Lever
14. Battery
15. Display

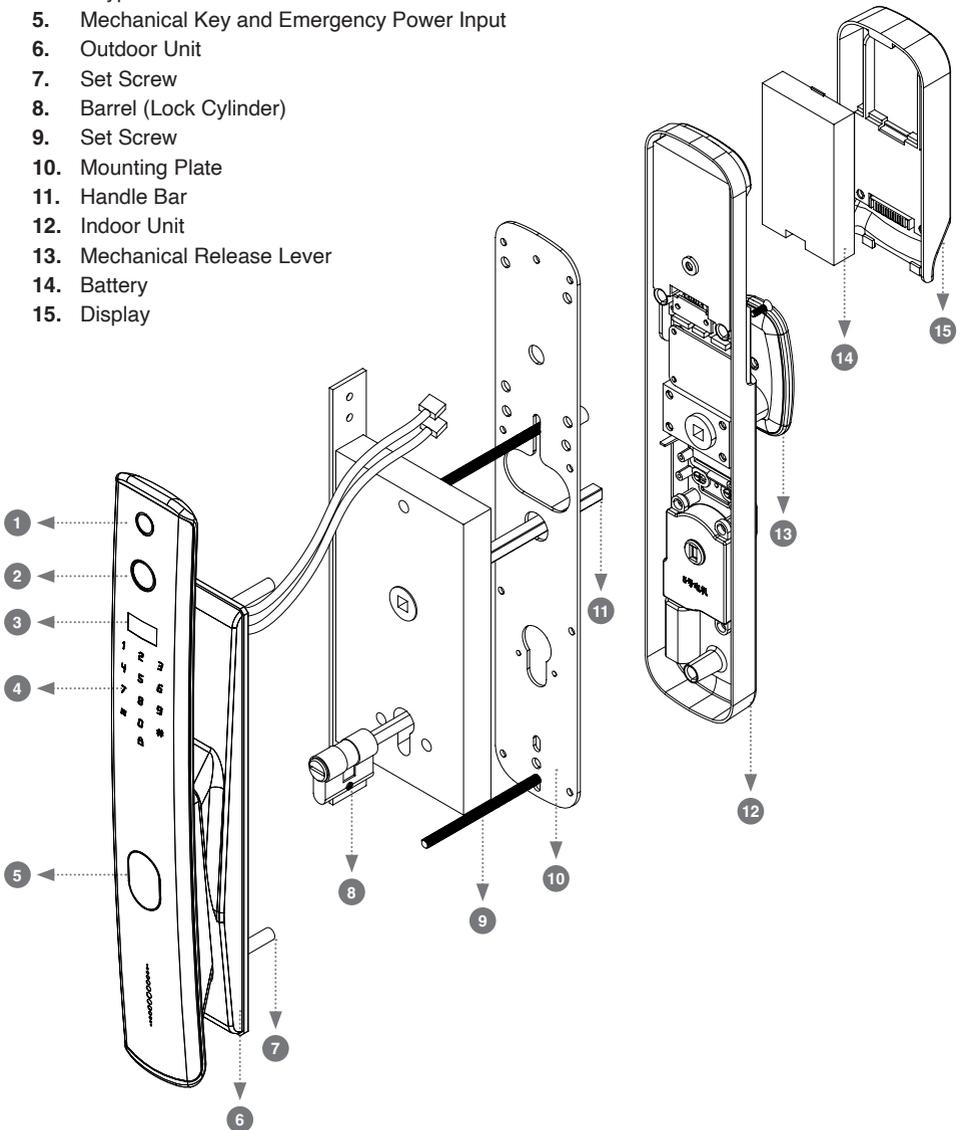

PRE-INSTALLATION INSTRUCTIONS

Determining the direction of door opening

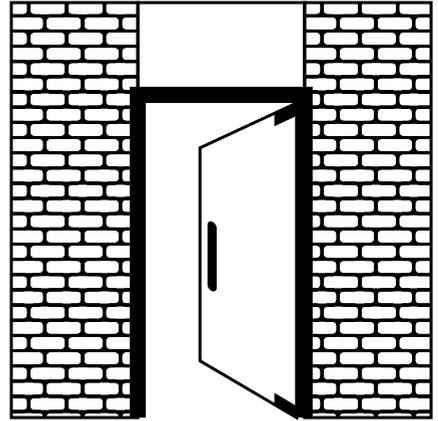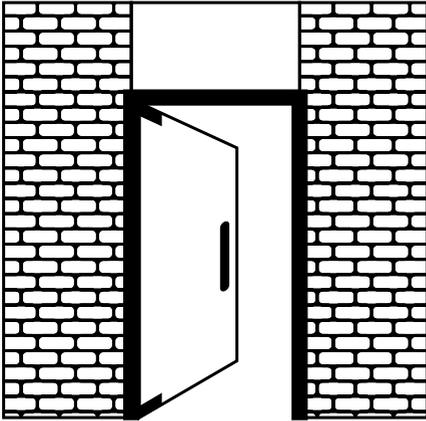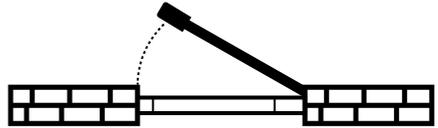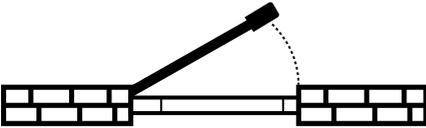

Left Inward Opening

Select No. 2 Right Opening in the commutation settings.

Right Inward Opening

Select No. 1 Right Opening in the commutation settings.




- **As shown in the pictures above, depending on which direction your door opens, the opening direction should be selected in the Commutation settings in the opposite direction.**
- Please select the mounting kit that is suitable for your door thickness.
- The standard mounting kit is suitable for doors with a thickness of 40-170 mm. If your door thickness is outside this range, please contact us so that we can offer you the most suitable solution. (Based on barrel measurement)
- Make sure your door and mechanical lock are working properly and smoothly.
- Make sure there is no sagging or warping in your door or door frame.


INSTALLATION INSTRUCTIONS




ATTENTION: Before drilling any holes in your door, make sure that the door is closed and that the distance between the door frame and the keyhole is 55 mm or more when viewed from the outside.

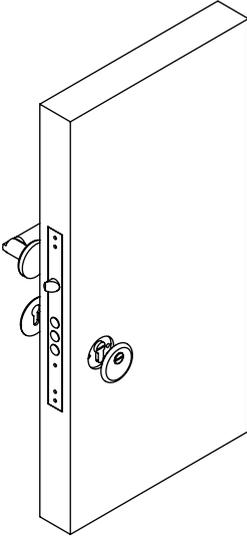


1
If necessary, remove the inner handle, barrel, and barrel cover from the door.

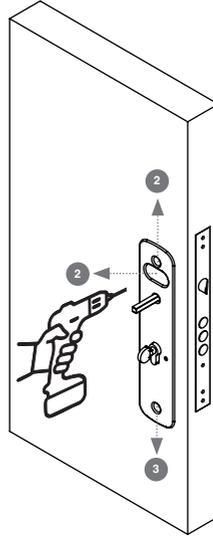

2
Place the mounting template on the door and drill holes from the inside and outside using a drill.

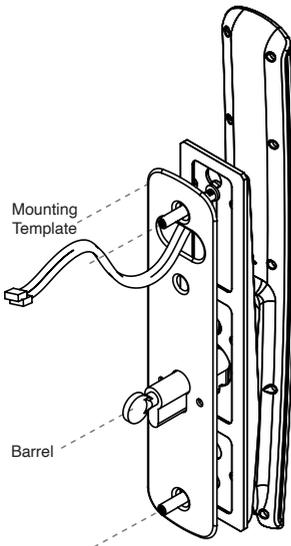

3
Use the mounting template and barrel to securely fasten the set screws to the hole centers.

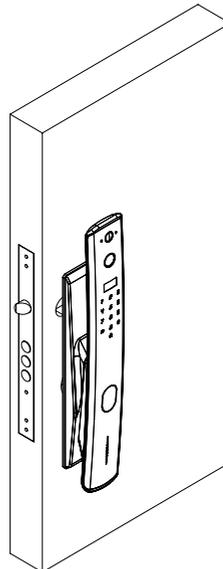


4
The surface of the outdoor unit is placed on the door surface without damaging the connection cables.

5


The outdoor unit is secured to the surface using M5 breakable screws with small gaskets inserted into the edges of the indoor unit mounting plate.

The cables coming from the outdoor unit are carefully connected to the relevant locations in the indoor unit. The cables are placed on the indoor unit mounting plate without being compressed and secured to the indoor unit mounting plate using the necessary screws.

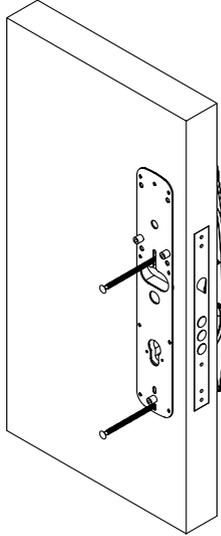


6


Carefully place the battery and screen back into place.

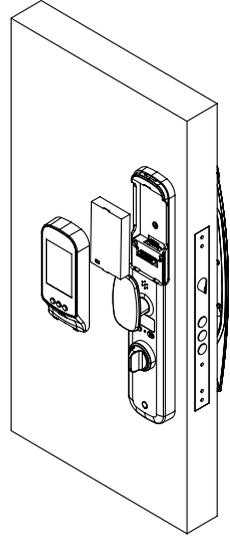

Caution: Make sure that the barrel and inner arm holes are centered on the mounting plate. Make sure that the mechanical keyhole on the outdoor unit is centered with the keyhole on the barrel.

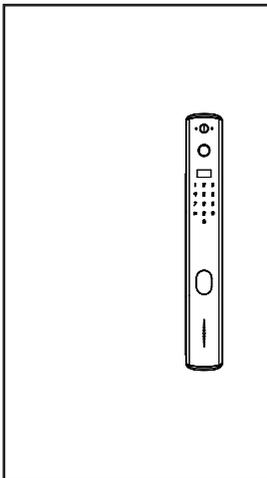

When the installation is complete, the device will appear as shown on the door.

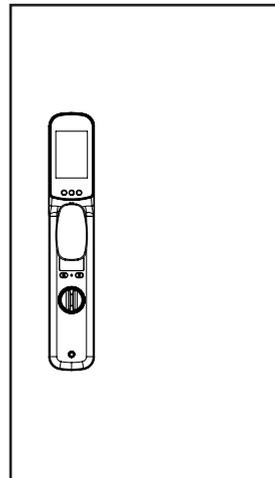

SETTING THE DEVICE

Pre-Installation Instructions

- Your device comes with two different modes: General Mode and Dual Verification Mode.

General Mode : Unlocking with any registered user

Dual Verification Mode : Unlocking with two different authentication combinations from face recognition (in current models), PIN code, and fingerprint options.

- Your device comes with factory settings.
- The factory default password is **1 2 3 4 5 6**.
- A device with factory settings is in Demo Mode, so it can be unlocked with any fingerprint or face and can operate without being paired with IC cards of the correct frequency. This is not a problem.
- The number of users can be between 00 and 99, with a total of 100 users that can be registered.
- The first 5 users between 00 and 05 are Authorized (Master) users and have access to all device settings.
- These users cannot be deleted unless the device is reset.
- Users between 06 and 99 are normal users and can be deleted by master users.
- Your device supports 9 different languages. These are, in order: Chinese, Indonesian, Russian, Vietnamese, Arabic, Spanish, Portuguese, Thai, and Turkish.
- You can use the following template to write down all user information. This template will help you remember the user codes later.

User Code	Name	Fingerprint	Password	IC-Card
00				
01				
02				
03				

Explanation of Symbols



Master
PIN Code



Single Use
PIN Code



User
PIN Code



Fingerprint



[#]
(Confirmation)



[*]
(Cancel / Delete)




Two-Digit
User Code

SETTING THE DEVICE

Introducing Menus

Light up the keypad by touching it, and press [*] [#] in sequence before entering another number.

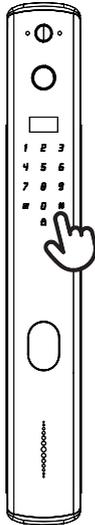

Main Menu

1. Create New User
2. Delete User
3. Network Settings
4. System Settings
5. Registration Inquiry
6. Reset

1 Create New User

Set Master Password



Touch the keypad and press [*] - [#] - 1 - 1 in sequence. Then set a 6-digit master password and press [#]. Repeat the process.

1. Fingerprint, Password, Card ◀
2. Anti Abduction Record



The specified master password belongs to the user with the code "00". **Do not forget your master user password and do not share it with anyone. You will need this password for all settings on the device from now on.**

Set Fingerprint (User)



1. Fingerprint, Password, Card ◀
2. Anti Abduction Record

Touch the keypad in sequence [*] - [#] - **Master Password** - [#] - 1. Then set a two-digit user code between 06 and 99, and press [#] - 1 in sequence.



Scan your entire finger **five times** on the fingerprint sensor to register your fingerprint.

Set IC-Card (User)



1. Fingerprint, Password, Card ◀
2. Anti Abduction Record

Touch the keypad and press [*] - [#] - **Master Password** - [#] - 1 in sequence. Then set a two-digit user code between 06 and 99, and press [#] - 1 in sequence.



Then, complete the process by placing the IC card provided with the device over the IC-CARD icon on the keypad.

SETTING THE DEVICE

Creating a password (User)



- 1. Fingerprint, Password, Card ◀
- 2. Anti Abduction Record

Touch the keypad and press [*] - [#] - **Master Password** - [#] - 1 in sequence. Then set a two-digit user code between 06 and 99, and press [#] - 1 in sequence.



After entering the 6-digit password, press [#] and repeat the same process once more.

2. Anti Abduction Record

- 1. Fingerprint, Password, Card
- 2. Anti Abduction Record ◀



The “Anti-Theft Recording” feature offered by our smart lock system is designed to take your security to the highest level. This feature provides you and your loved ones with an additional layer of security in unusual situations.

How Does It Work?

Normally, you open your door using your fingerprint or other unlocking methods. However, in an emergency or if someone forces you to open the door, you can use the backup unlocking method you have designated to open the door. This serves as an additional precaution to protect you.

Notification System

When you open the door using the Anti-Theft Log feature, a pre-designated family member or authorized user is notified of the situation via your mobile app. This feature is designed to provide support and ensure your safety in emergency situations.

- 2. User Deletion



Touch the keypad in sequence: [*] - [#] - [PASSWORD] - [#] - 2. Then enter a two-digit user code between 06 and 99 on the screen that appears and press [#] to complete the user deletion process.

3 Network Settings



1. Network Configuration
2. Network Deletion

1. Network Configuration

See the Tuya app page for network configuration settings (Page 17).



2. Network Deletion



Touch the keypad and press the following keys in order: [*] - [#] - [PASSWORD] - [#] - [3]. Then press [2] on the screen that appears to complete the network deletion process.

4 System Settings

1. Time Setting
2. Sound Setting
3. Verification Mode
4. Always On Mode
5. Removal Prevention Setting
6. Human Sensor

1. Time Setting



After entering the above key combination, you can set the time by entering the year, month, and day information, each with two digits, on the "Time Setting" screen that appears. Then, complete the process by entering the two-digit hour and two-digit minute settings.

20**/ **/ **

00 : 00

2. Sound Setting



1. Increase Volume
2. Decrease Volume

Touch the keypad and press the following keys in order: [*] - [#] - [PASSWORD] - [#] - [4] - [2]. On the screen that appears, press [1] to increase the volume and [2] to decrease the volume.



SETTING THE DEVICE

3. Verification Mode



1. Unlocking with Single Authentication
2. Unlocking with Double Authentication

Touch the keypad and press the following keys in order: [*] - [#] - [PASSWORD] - [#] - [4] - [3]. Then, press [1] on the next screen to activate single verification mode. (For example, the lock can be opened with only a fingerprint, only a password, or only an IC card.) Press [2] to activate dual verification mode. (For example, the lock can be opened with dual verification, such as a fingerprint and a password, or an IC card and a password.)

4. Always On Mode



1. Always On Mode Off
2. Always On Mode On

Introduction - You can keep your lock open or locked at all times during busy periods.

5. Lifting Prevention Alarm



1. On
2. Off

This feature is activated when someone attempts to forcefully remove your smart lock from the door.

When the feature is activated, the alarm system emits an audible warning. You can activate the feature by pressing [1] and deactivate it by pressing [2].

6. Human Sensor



1. On
2. Off

The human sensor (in supported models) is a feature that allows your smart lock to wake up and illuminate the keypad and fingerprint sensor when you approach the device using one of the wave, medium-range detection, or long-range detection options.

You can activate the feature by pressing [1], and deactivate it by pressing [2].

SETTING THE DEVICE

5 Record Query



Touch the keypad and press the following keys in order: [*] - [#] - [PASSWORD] - [#] - [5]. The screen that opens will display a list of user logins between 00 and 99, sorted by date and time. You can scroll through the list using the [5] and [6] keys.

6 Reset



Touch the keypad and press the following keys in order: [*] - [#] - [PASSWORD] - [#] - [6]. On the screen that opens, press [#] to answer Yes to the question "Restore factory settings?" or press [*] to answer No.

Introducing Submenus



To access the submenu, tap the keypad to illuminate it and press [1] - [#] - [PASSWORD] - [#] in sequence.

Main Menu

1. Commutation Setting
2. Spring Body Setting
3. Automatic Locking Switch
4. Automatic Locking Time
5. Motor Rotation Time
6. Torque Setting
7. Human Sensor

1. Commutation (Direction Adjustment)



1. Select Open Left
2. Select Open Right

This feature allows you to choose your preferred use depending on the lock direction of your door.

Press [1] to select left opening,
Press [2] to select right opening.

2. Self-Springing Locking Body Adjustment



1. Not Self-Springing Locking Body
2. Self-Springing Locking Body

This feature is not available for lock types used in Turkey and Europe.

Press [1] to select the non-spring-loaded type,
press [2] to select the spring-loaded type.

3. Automatic Lockout Setting



1. Auto Lock On
2. Auto Lock Off

This feature allows you to set your door to lock automatically after a certain period of time.

Press [1] to enable automatic locking.
Press [2] to disable automatic locking.
(It is recommended that you keep automatic locking disabled.)

SETTING THE DEVICE

4. Automatic Lockout Time



Automatic Lockout Time
XX

With this feature, you can set your door to lock automatically after a period of between **3 and 30 seconds**.

5. Engine Rotation Time



Engine Rotation Time
XXXX

With this feature, you can set the motor rotation speed of your door to a rotation value between 100 and 1300 revolutions per minute. (The recommended value is 400.)

6. Torque Setting



1. Low
2. Medium
3. High

This feature allows you to set the power of your lock motor using one of three options depending on the size or model of your door lock.

Press **[1]** to select low torque power.
Press **[2]** to select medium torque power.
Press **[3]** to select high torque power.

7. Human Sensor



1. Hand Wave
2. Medium Distance
3. Long Distance


The human sensor (in supported models) is a feature that allows your smart lock to wake up and illuminate the keypad and fingerprint sensor when you approach the device using one of the wave, medium distance, or long distance detection options.

- [1] Press to activate the wave feature,
- [2] Press to activate the medium-range feature,
- [3] Press to activate the long-range feature,

Device Factory Reset

If you forget your device's master password, a second reset method has been specified. Press and hold the small buttons with the lock and unlock symbols on the internal unit of your device simultaneously until you hear a signal tone.

Then, you can restore your device to factory settings by pressing **[#]** on the keypad on the front unit of your device.

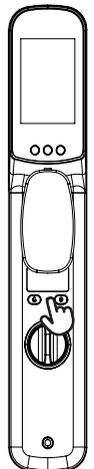

NETWORK AND APPLICATION SETTINGS

1. Download The Application


First, you need to download the “**TUYA SMART**” app to your mobile device from the Apple Store or Google Play Store.

You can access the app by scanning the QR code below.



Before installing the application on your phone, make sure you have a WI-FI connection and that this connection is on the WI-FI 2.4 GHz band with the 802.11 b/g/n standard. (Other connection types are not supported.)


Application Installation Steps

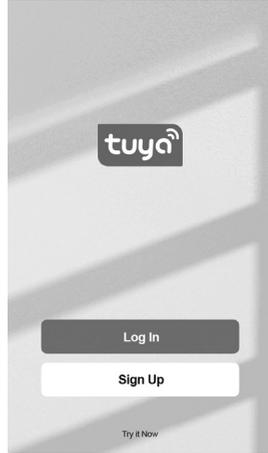


If you have not used this application before, click the “**Sign Up**” button in this menu to create a new account. You will need an active email address to complete this process.

On the screen that opens, enter your country and email address, then click the Get Verification Code button.


NETWORK AND APPLICATION SETTINGS

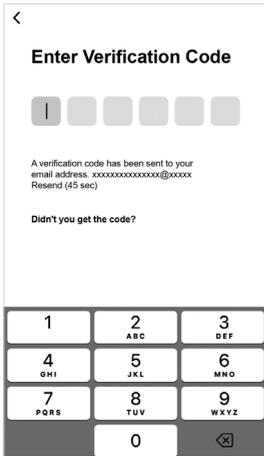

Check the email address you entered on the previous screen and enter the verification code you received in this screen.

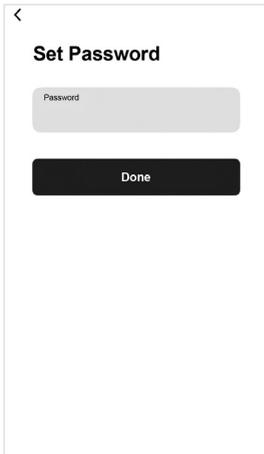

On the screen that opens, create your personal password according to the password creation instructions and click the "Done" button to continue.

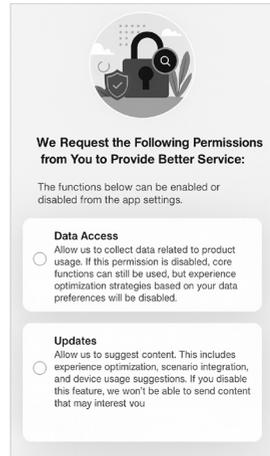

You can proceed to the next screen by granting the relevant permissions on this screen.




1. Network Configuration
2. Network Deletion


Activate the network configuration feature by pressing [*] - [#] - **Master Password** - [#] - 3 - 1 on the keypad.




NETWORK AND APPLICATION SETTINGS

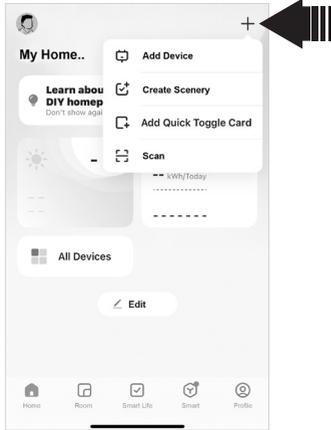

On the screen that opens, tap the Add Device tab under the “+” icon in the upper right corner to proceed to the next step.

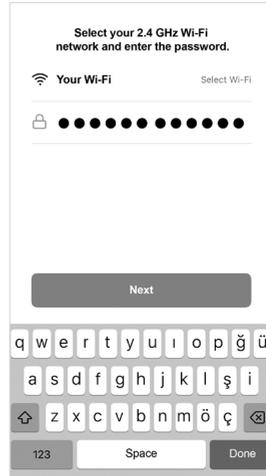

On this screen, you can continue the process of connecting to your Wi-Fi network by entering your password.

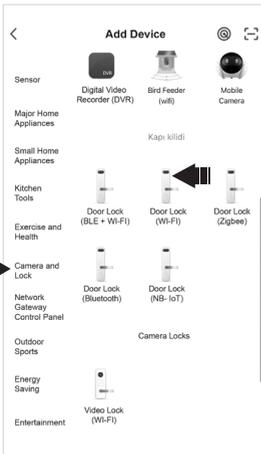


On this screen, click the Door Lock (Wi-Fi) icon in the Camera and Lock tab to proceed to the next screen.



If you see the indicator light on your device flashing rapidly on this screen, you can continue the process by clicking the “Confirm the indicator is blinking rapidly” button.


NETWORK AND APPLICATION SETTINGS

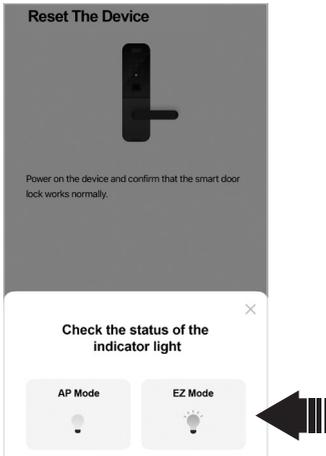

After confirming that the indicator light is flashing, select “EZ Mode” to complete the setup. If EZ Mode cannot connect, select AP Mode and follow the steps below.




To pair your device with the smartphone app, click on the “Go to Connect” tab to continue.

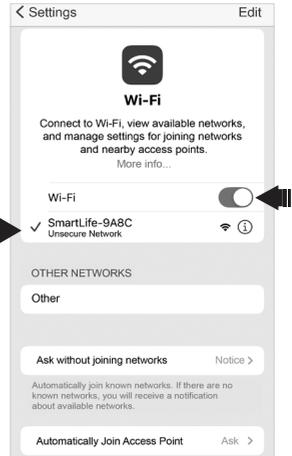


You can proceed to the next screen by selecting the network displayed as **SmartLife-XXXX** on the Wi-Fi screen. This process takes place in the Wi-Fi Settings section of your phone.

(If you do not see a network named **SmartLifeXXXX** in the list, turn off Wi-Fi using the button indicated by the small arrow, then turn it back on and try connecting again.)

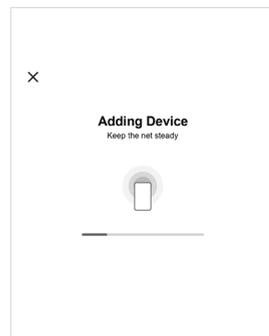

Depending on your phone's connection settings, you may have to wait a few minutes while your device is being added.

NETWORK AND APPLICATION SETTINGS

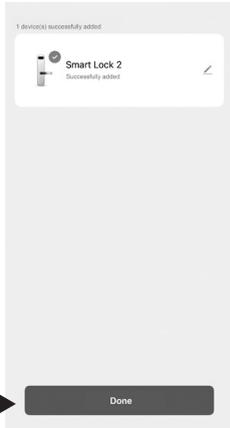


You will see a green check mark next to the added device at the top of this screen. Click the **"Done"** button to complete the setup.



On this screen, you can see the person at your door live, communicate with them remotely, and, if you wish, open the lock to grant them entry.




Once setup is complete, you will see a notification from the Tuya Smart app on your phone when you press the bell icon on the outdoor unit of your device.

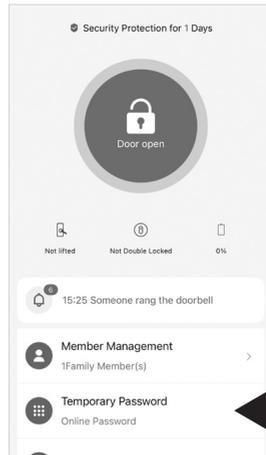


To use the temporary password feature, which allows authorized persons to log in a specified number of times within a specified period, click on the tab indicated by the arrow on the screen.


NETWORK AND APPLICATION SETTINGS

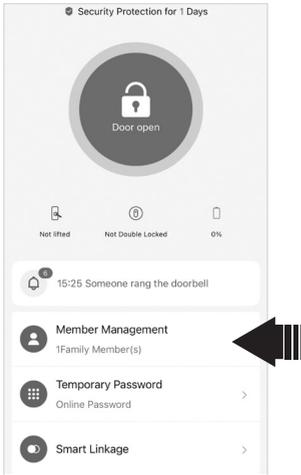

When you click on the tab indicated by the arrow on this screen, you can view user login records.

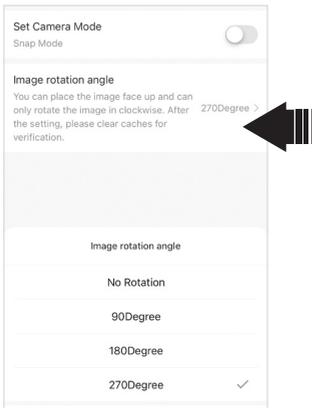

When the doorbell on your device is pressed, the image of the person at the door may appear differently on the notification screen of your phone. In this case, you can rotate the image to the desired angle from the “Settings > Image Rotation Angle” tab.

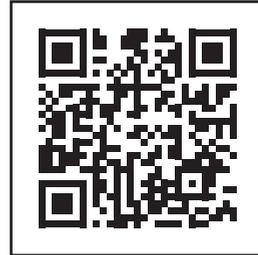

Scan the QR code above to watch the application installation video.

Additional Security Disclosures

If you try to enter the device using a method other than the defined entry methods, the alarm on the device will be triggered and the device will block itself for 3 minutes. If this happens, please wait for 3 minutes.



blitzlock
SMART LOCK SYSTEMS

Üçevler Mah. 29. (220) Sk. No: 8/A Nilüfer / BURSA / TÜRKİYE
+90 (533) 583 64 99 info@blitzlock.com www.blitzlock.com

0850 244 4 294

fix
STUDIO
www.fixostudio.com
FX-BLITZ/ 2025/06